DO NOT DESTROY OR MISPLACE THIS CARD

FOR YOUR SAFETY
DO NOT STORE OR USE GASOLINE
OR OTHER FLAMMABLE VAPOURS
AND LIQUIDS IN THE VICINITY OF
THIS OR ANY OTHER APPLIANCE.

IMPORTANT OPERATING AND INSTALLATION DATA







# QSB Salamander Broilers

Manufactured by:



NOTE: LOCATE IN A PROMINENT POSITION INSTRUCTIONS WHICH MUST BE FOLLOWED IN THE EVENT THE SMELL OF GAS IS DETECTED.

# FOR YOUR SAFETY WHAT TO DO IF YOU SMELL GAS

- DO NOT TRY TO LIGHT ANY APPLIANCE.
- DO NOT TOUCH ANY ELECTRI-CAL SWITCH; DO NOT USE ANY PHONE IN YOUR BUILDING.
- IMMEDIATELY CALL YOUR GAS SUPPLIER FROM A NEIGHBOR'S PHONE. FOLLOW THE GAS SUPPLIER'S INSTRUCTIONS.
- IF YOU CANNOT REACH YOUR GAS SUPPLIER, CALL THE FIRE DEPARTMENT.
- EXTINGUISH ANY OPEN FLAME.

#### **WARNING:**

IMPROPER INSTALLATION,
ADJUSTMENT, ALTERATION,
SERVICE OR MAINTENANCE CAN
CAUSE INJURY OR PROPERTY
DAMAGE. REFER TO THIS
MANUAL. FOR ASSISTANCE OR
ADDITIONAL INFORMATION
CONSULT A QUALIFIED
INSTALLER, SERVICE AGENCY
OR THE GAS SUPPLIER.

#### INSTALLATION INSTRUCTIONS

- 1. Gas connections must be made by an authorized gas fitter who should check piping and meter. Work must be done in accordance to the "Installation Code for Gas Burning Appliances and Equipment", CGA Standard CAN/CGA B149. "Latest Edition." Also consult local governing codes.
- 2. Remove all packing and shipping aids.
- 3. Position unit level on counter, on wall (using optional wall brackets), on range (using optional range mounting brackets).
- 4. Connect gas supply.
- 5. Check all gas piping and tighten if required.
- 6. This equipment should be installed by a stainless steel fabricator and **must** be connected to gas supply by a **qualified gas fitter** to conform to local codes.

## **FLOORING & CLEARANCES**

Approved for installation on non-combustible flooring or surface, and within a minimum clearance of 2" to sides and 4" to back from adjacent vertical combustible construction.

# LIGHTING INSTRUCTIONS

- 1. Allow 5 minutes shut down before lighting or relighting.
- 2. Turn left and right burner valve to off position.
- 3. Turn on main appliance valve and light both pilots.
- 4. Set burner valves to high or low setting as desired. Manifold pressure 7" w.c. (NAT) 11" w.c. (PROP).

# **COMPLETE SHUT DOWN**

- 1. Close main gas valve on supply line.
- 2. Turn burner valves to "off" position.
- 3. Turn pilot valves off by turning with screw driver so that slot is vertical.

### **ADJUSTMENTS**

- 1. Adjust pilot burners. Flame should be approximately 3/8" long.
- 2. Adjust low flame on burner with small adjusting screw in main valve stems. Flame should cover the complete burner surface.

### TO OPERATE

1. Turn burner valves to Hi or Low position as desired.

#### **CLEANING**

- 1. Should be done at the end of each day or each shift.
- 2. Excess grease and splatter should be removed from all surfaces to prevent it from burning on.
- 3. Grill surface should be wiped clean of grease.

## **SERVICING**

Very little required but regular checks should be made to ascertain that:

- 1. Burner ports are not clogged.
- 2. Orifice openings are clean.
- 3. Burner valves operate freely (require greasing approximately every 3 to 6 months).

NOTE: We cannot guarantee the operation of this broiler if serviced by anyone other than an authorized firm or agent.

### **GUARANTEE**

- QUEST Metal Products guarantee its equipment to the original purchaser, to be free from defects in material and workmanship for a period of one year, and will guarantee operational parts for a period of 90 days subject to the following conditions.
- (A) Written claim by authorized dealer verifying authenticity of said claim.
  - (B) Replacement parts will be supplied and charged for.
  - Credit will be issued only when faulty parts are

- returned to the company prepaid and found to be faulty by the original manufacturer.
- If such conditions as faulty installation, misuse, lack of servicing, or servicing by unqualified personnel exist it voids this guarantee.
- You have purchased the best equipment. With proper care and servicing it will give you years of trouble free operation.

QUEST Metal Products Ltd.