

BREWING



STEP 1

Begin each brew cycle with a clean, empty Smart Funnel and server. Insert a BUNN[®] filter into the funnel.



STEP 2

Pour a packet or grind fresh coffee into the filter. Level the bed of grounds by gently shaking. Slide the loaded brew funnel into the funnel rails until it stops.



STEP 3

Makesure theENABLE BREW switch is ON. Press the switch of the desired batch size. Press the Brew Switch (A, B, or C) assigned to the desired product/recipe.



STEP 4


When the coffee no longer drips from the funnel tip and funnel lock retracts, carefully remove the Smart Funnel and discard the used grounds. Thoroughly clean and rinse the Smart Funnel to be ready for next brew cycle.
Do not Place Funnel in Dish-washer.



STEP 5

Fresh coffee is available and ready to be dispensed from the TF Server or Airpot. Ready the TF Server or Airpot by ensuring the server is empty and clean before positioning under the Smart Funnel for the next batch brew cycle.

CLEANING - BREWER

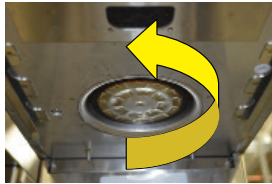

STEP 1

Remove Smart Funnel. Unscrew the Peak Extraction[™] sprayhead.
Underside View: Counter-Clockwise/Turn Left



STEP 2

Once the Peak Extraction sprayhead is removed, set aside to be cleaned.



STEP 3

Insert the sprayhead cleaning tool into the Sprayhead and By-pass outlet fitting, rotate several times to remove any mineral deposits from the fitting.



STEP 4

Use a clean damp cloth rinsed in any mild nonabrasive, liquid detergent to wipe down the sprayhead panel.



STEP 5

Use a clean damp cloth rinsed in any mild nonabrasive, liquid detergent to clean all surfaces on Bunn-O-Matic[®] equipment.



STEP 6

Grab the Peak Extraction sprayhead that was set aside earlier and separate apart by removing the black sprayhead seal.



STEP 7

Prepare a warm soapy solution (140°F). Submerge all the separated sprayhead parts in the soapy solution.



STEP 8

Wash all individual sprayhead parts. Ensure all sprayhead holes are fully open and clear of any product residue or mineral deposit build-up.



STEP 9

After washing the sprayhead parts, thoroughly rinse the parts with clean water.



STEP 10

Reassemble the Peak Extraction sprayhead and screw onto the threaded outlet fitting.
Underside View: Clockwise/Turn Right